U.5. Gov 1

SAA09FY12-006

REV. B

8/L: 389.00 SYS: 175-TON

> BRIDGE CRANE, VAB

Critical Item:

Relay, Auxiliary Hoist

AUG 2 0 1993

Find Number:

K9

Criticality Category:

2

SAA No: 09FY12-006

System/Area:

175-Ton Bridge Crane/VAB

NASA

Part No: NA PMN/

K60-0528/

Name:

175-Ton Bridge Crane/VAB

M(g/ Part No: Potter-Brumfield/

Drawing/

67-K-L-11348/

KHP 17411

Sheet Na:

19

Function: Energized when hoist motors are drawing less than 20 amps. Contacts are closed to allow the console ammeter to display actual current. De-energized and contacts opened when current reaches 20 amps to scale the current reading on the console ammeter by a factor of 10.

Critical Fallure Mode/Fallure Mode No:

- Coil fails open/09FV12-006.061
- N.O. contact fail open/09FY12-006.062

Failure Cause:

- Corrosion, fatigue
- b. Corrosion, binding mechanism

Fallure Effect: (For both fallures) The current reading on the console ammeter will be scaled without indication from console light PL34. This could lead to an operator giving an erroneous input during float operations resulting in an inadvertent movement of the load. Possible damage to a vehicle system. Time to effect: seconds.

ACCEPTANCE RATIONALE

Design:

- Coll Rating: 240 volts
- · Coll Actual: 120 volts
- Contact material: Silver
- Expected mechanical life of 10 million operations.

Attachment S050234BL Sheet 96 of 132

SAA09FY12-006

G 2 0 1993.

 This relay was off-the-shelf hardware selected by the crane manufacturer for this applicatian.

Test

- OMRSD file VI requires verification of proper performance of hoist operational test annu-
- OMRSD file VI requires verification of proper performance of console ammeter switchover point (main hoist-60A, aux hoist-20A) annually.
- OMI Q3008, Operating Instructions, requires all crane systems be operated briefly in all speeds to verify satisfactory operation before lifting operations.

Inspection:

 OMI Q6003, Maintenance Instructions requires annual inspection of relay contacts and contact members for burning, pitting, proper alignment and discoloration caused by overheating. Visually check closing coils for deteriorated insulation and evidence of overheating or burning.

Failure History:

- The PRACA database was researched and no failure data was found on this component in the critical failure mode.
- The GIDEP failure data interchange system was researched and no failure data was found on this component in the critical failure mode.

Operational Use:

- Correcting Action:
 - 1) The failure can be recognized via a Selsyn (inadvertent movement) that is in view of both operators.
 - 2) Operator can stop all crane operations, when the failure indication is noticed, by returning the master control switch to neutral, by releasing the brake switch or pressing the E-Stop button.
 - Operators are trained and certified to operate these cranes and know and understand what to do if a failure indication is present.
 - 4) During all critical lifts, there is at least one Emergency Stop (E-Stop) operator remote from the operator's cab observing the load lift, and can stop the crane if a failure indication is noticed:

Time(came:

Estimated operator reaction time is 3 to 10 seconds.

Attachment S050234BL Sheet 97 of 132